

Lab Assignment (in C): Interrupts and Binary Semaphores

Objective

Learn how to create a single dynamic user defined interrupt service routine callback driver/library.

This lab will utilize:

- Semaphores
 - Wait on [Semaphore Design pattern](#)
- [Lookup table](#) structures and Function Pointers
 - You will allow the user to register their callbacks
- [Interrupts](#)
 - LPC supports rising and falling edge interrupts on certain port pins
 - These port/pin interrupts are actually OR'd together and use a single CPU interrupt.
 - For the SJ1 board, it is: EINT3 interrupt.
 - On the SJ2 board, GPIO interrupts are handled by a dedicated GPIO interrupt (exception number 54)

Where to start

- For Part 0, do the following
 - **Read the LPC User Manual**, particularly ALL information about `Table 95: GPIO Interrupt`
 - Browse the code, and fully absorb `interrupt_vector_table.c` and `entry_point.c`
- For Part 1, first review the Semaphore Design pattern that will be utilized later

Port Interrupts

You will configure GPIO interrupts. This is supported for `Port0` and `Port2` and the following registers are relevant. Note that there is a **typo** in the LPC user-manual as pointed by the orange notation below.

Table 95. Register overview: GPIO interrupt (base address 0x4002 8000)

Name	Access	Address offset	Description	Reset value ^[1]	Table
STATUS	RO	0x080	GPIO overall Interrupt Status.	0	101
STATR0	RO	0x084	GPIO Interrupt Status for Rising edge for Port 0.	0	102
STATF0	RO	0x088	GPIO Interrupt Status for Falling edge for Port 0.	0	103
CLR0	WO	0x08C	GPIO Interrupt Clear.	-	104
ENR0	R/W	0x090	GPIO Interrupt Enable for Rising edge for Port 0.	0	105
ENF0	R/W	0x094	GPIO Interrupt Enable for Falling edge for Port 0.	0	106
STATR2	RO	0x0A4	GPIO Interrupt Status for Rising edge for Port 0.	0	107
STATF2	RO	0x0A8	GPIO Interrupt Status for Falling edge for Port 0.	0	108
CLR2	WO	0x0AC	GPIO Interrupt Clear.	-	109
ENR2	R/W	0x0B0	GPIO Interrupt Enable for Rising edge for Port 0.	0	110
ENF2	R/W	0x0B4	GPIO Interrupt Enable for Falling edge for Port 0.	0	111

[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

Assignment

Part 0: Simple Interrupt

The first thing you want to do is get a single Port/Pin's interrupt to work **without using the RTOS**. Make sure you fully understand the following diagram before you proceed. You will configure bits to trigger your GPIO interrupt, and you must also clear bits inside of your GPIO interrupt.


```
// a) Clear Port0/2 interrupt using CLR0 or CLR2 registers
// b) Use fprintf(stderr) or blink and LED here to test your ISR}
```

Part 1: Interrupt with Binary Semaphore

You will essentially complete [Part 0](#), but with the RTOS using a binary semaphore as a signal to wake a sleeping task. It is recommended to save your code in a separate file (or comment it out), and then start this section of the lab. Do not forget to reference the Semaphore Design Pattern.

```
#include "FreeRTOS.h"
#include "semphr.h"
#include "lpc40xx.h"

static SemaphoreHandle_t switch_pressed_signal;
void main(void) {
    switch_pressed_signal = ... ;    // Create your binary semaphore

    configure_your_gpio_interrupt(); // TODO: Setup interrupt by re-using code from Part 0
    NVIC_EnableIRQ(GPIO_IRQn);      // Enable interrupt gate for the GPIO

    xTaskCreate(sleep_on_sem_task, "sem", (512U * 4) / sizeof(void *), NULL, PRIORITY_LOW, NULL);
    vTaskStartScheduler();
}
// Warning: You can only use uart_printf__polled() inside of an ISR
void gpio_interrupt(void) {
    xSemaphoreGiveFromISR(switch_pressed_signal, NULL);
    clear_gpio_interrupt();
}
void sleep_on_sem_task(void * p) {
    while(1) {
        // Use xSemaphoreTake with forever delay and blink an LED when you get the signal
    }
}
```

Part 2: Support GPIO interrupts using function pointers

You are designing a library that will allow the programmer to be able to "attach" a function callback to any and each pin on `Port 0`. Implement all methods and it should work as per the description mentioned in the comments above each function declaration.

```
// Objective of the assignment is to create a clean API to register sub-interrupts like so:
void pin30_isr(void) { }
void pin31_isr(void) { }
// Example usage:
void main(void) {
    gpio0__attach_interrupt(30, GPIO_INTR__RISING_EDGE, pin30_isr);
    gpio0__attach_interrupt(31, GPIO_INTR__FALLING_EDGE, pin31_isr);}

```

Here is starter code for you that demonstrates the use of function pointers:

```
// @file gpio_isr.h
#pragma once

typedef enum {
    GPIO_INTR__FALLING_EDGE,
    GPIO_INTR__RISING_EDGE,
} gpio_interrupt_e;
// Function pointer type (demonstrated later in the code sample)
typedef void (*function_pointer_t)(void);
// Allow the user to attach their callbacks
void gpio0__attach_interrupt(uint32_t pin, gpio_interrupt_e interrupt_type, function_pointer_t callback);
// Our main() should configure interrupts to invoke this dispatcher where we will invoke user attached
// You can hijack 'interrupt_vector_table.c' or use API at lpc_peripherals.h
void gpio0__interrupt_dispatcher(void) {}

```

And here is the sample code for the implementation:

```
// @file gpio_isr.c
#include "gpio_isr.h"
// Note: You may want another separate array for falling vs. rising edge callbacks

```


```

static function_pointer_t gpio0_callbacks[32];
void gpio0__attach_interrupt(uint32_t pin, gpio_interrupt_e interrupt_type, function_pointer_t callback)
    // 1) Store the callback based on the pin at gpio0_callbacks
    // 2) Configure GPIO 0 pin for rising or falling edge
}
// We wrote some of the implementation for you
void gpio0__interrupt_dispatcher(void) {
    // Check which pin generated the interrupt
    const int pin_that_generated_interrupt = logic_that_you_will_write();
    function_pointer_t attached_user_handler = gpio0_callbacks[pin_that_generated_interrupt];

    // Invoke the user registered callback, and then clear the interrupt
    attached_user_handler();
    clear_pin_interrupt(pin_that_generated_interrupt);
}

```

Below image shows the software workflow. Click on the image below to view animation and understand more on how the driver should work.

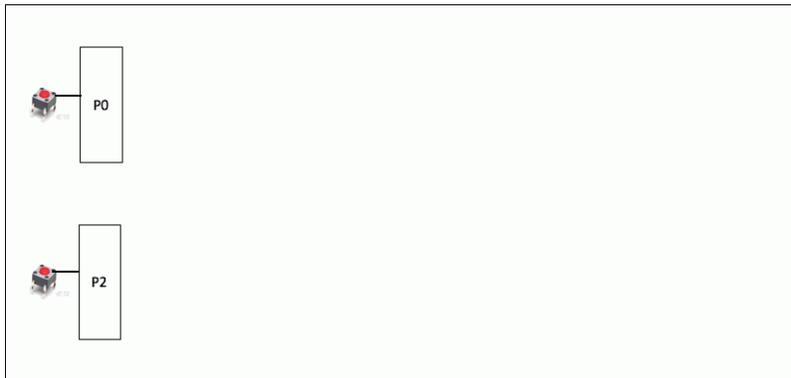

Extra Credit: Go above and beyond

There are a number of ways to go the extra step and separate yourself from an average student. For this lab, you can do several things to earn extra credit:

- Improve the code quality. Instead of hacky code that barely works, demonstrate your code quality by making your code more robust and clean.
 - For example, extend the API at `lpc_peripherals.h` such that you do not have to modify `interrupt_vector_table.c`
 - Go back to the previous lab, and instead of implementing a task that reads input, design it such that it registers a callback instead.
 - For example, you will eliminate `read_switch` task

You can extend your API in [Part 2](#) to also support [Port 2](#)

Requirements

- You should be able to fully re-write code for [Part 0](#) or [Part 1](#), meaning that you understand the code that you just wrote. You are encouraged to ask questions for any line of code that is not well understood (or magical).
- Should be able to specify a callback function for any pin for an exposed GPIO given a rising or falling condition
 - We may ask you to change which pin causes a particular callback to be executed in your code and then recompile and re-flash your board to and prove it works with any pin

Note that printing 4 chars inside an ISR can take 1ms at 38400bps, and this is an eternity for the processor and should never be done (other than todebug)

What to turn in:

- Place all relevant source files within a .pdf file.
 - Turn in the **screenshots** of terminal output.
-

Revision #27

Created 5 months ago by [Preet Kang](#)

Updated 1 week ago by [Preet Kang](#)

?